




AUTO CARE CONCENTRATE RANGE



SWADESH CONCENTRATE PRODUCT RANGE

- »» **Home Care Concentrate**
- »» **Personal Care Concentrate**
- »» **Auto care Concentrate**
- »» **Bio Degradable (Eco Friendly) Home Care Concentrate**



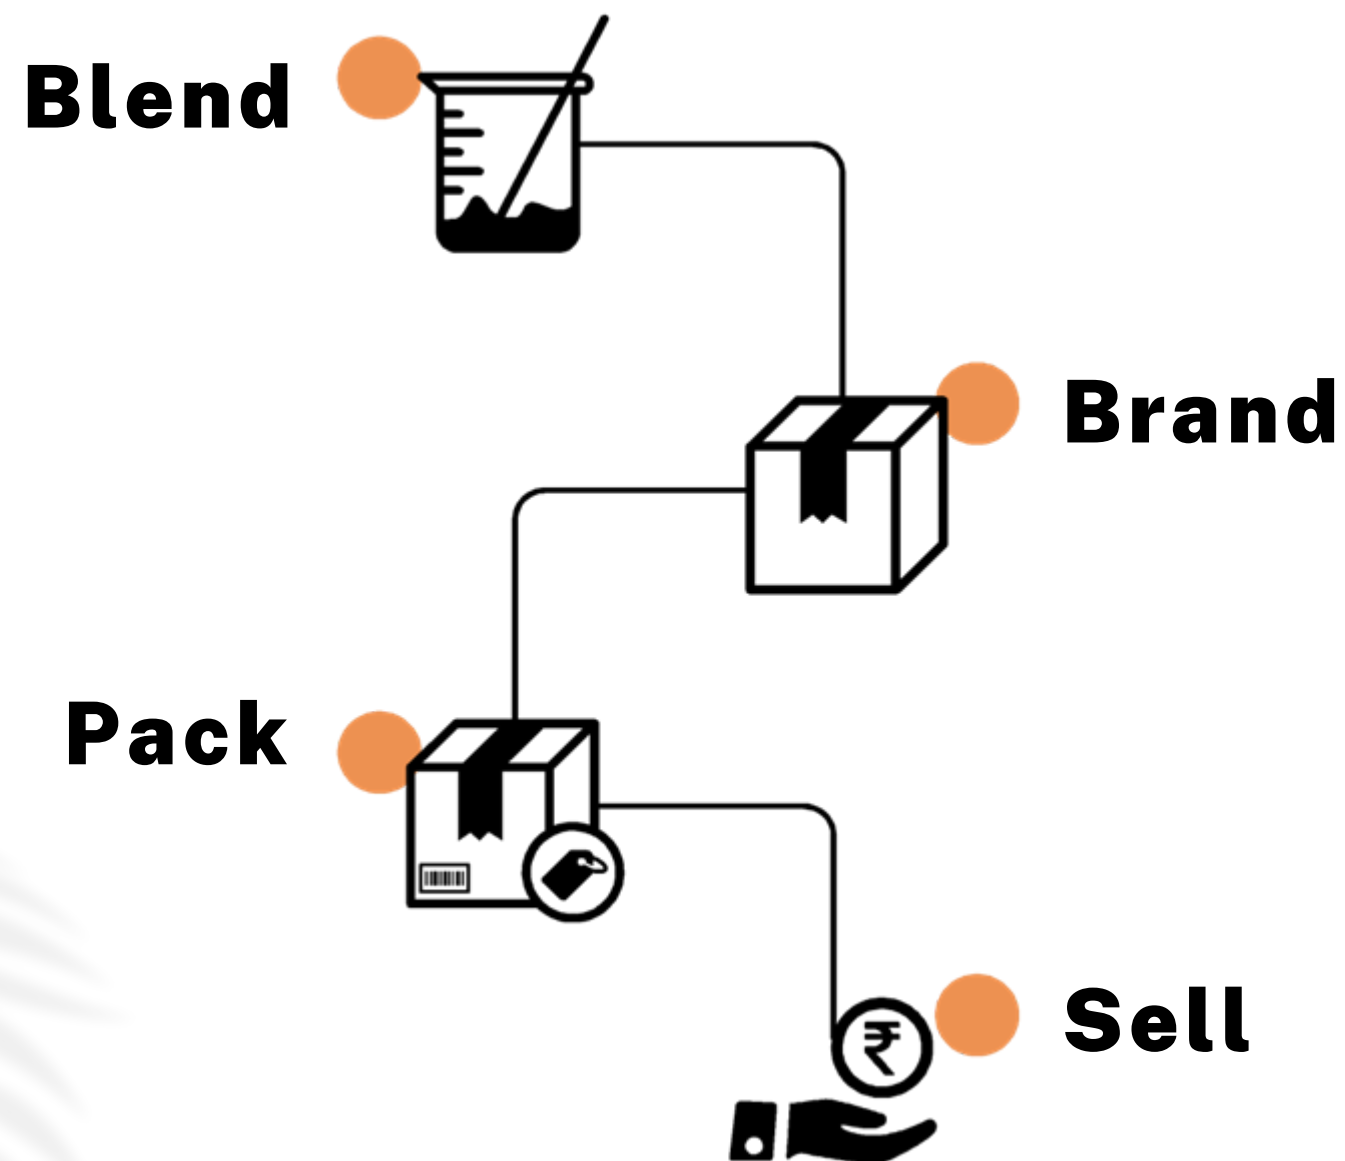


- » As home care industry growing faster but logistics is big challenge..!
- » Our Concentrate is one stop solution for manufacturer, there is no technical skill, More flexibility, cost Effective...!



AUTO CARE CONCENTRATE

- **Dash Board Polish Concentrate 3x**
- **Tyre Polish Concentrate 3x**
- **Car Shampoo Concentrate 5x**
- **Foam Wash Concentrate 5x**
- **Coolant Concentrate 10x**

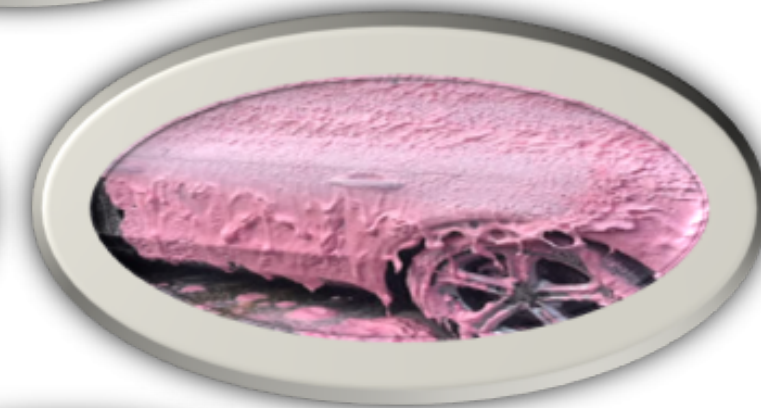

Dash Board Polish Concentrate 3x

Ingredient	Proportion
DPC3X	1 KG
Water	2

Process For 3 liter Batch :

- Add DPC 3X@ 1kg,
- Add 1 Ltr Water first & Break Paste & Mix Well, After Stable add Remaining water 1 ltr water slowly and stir rigorously (at 150-200 RPM approx.) for 15 mins & Keep it Aside for Stable.
- Continue Same Proportion for Next Batch.



Tyre Polish Concentrate 3x

Ingredient	Proportion
TPC3X	1 KG
Water	2 KG

Process For 3 liter Batch :

- Add **TPC 3X** @ 1kg,
- Add 1 Ltr Water first & Break Paste & Mix Well, After Stable add Remaining water 1 ltr water slowly and stir rigorously (at 150-200 RPM approx.) for 15 mins & Keep it Aside for Stable.
- Continue Same Proportion for Next Batch.



Car Shampoo Concentrate 5x

Ingredient	Proportion
CSC 5X	1 KG
Water	4

Process For 5 liter Batch :

- Add **CSC 5X** @ 1 lt,
- Add 4 lt water slowly and stir rigorously (at 150-200 RPM approx.) for 15 mins.
- Continue Same Proportion for Next Batch.



Foam Wash Concentrate 5x

Ingredient	Proportion
FWC 5X	1 KG
Water	4

Process For 5 liter Batch :

- Add **FWC 5X** @ 1 lt,
- Add 4 lt water slowly and stir rigorously (at 150-200 RPM approx.) for 15 mins.
- Continue Same Proportion for Next Batch.

The best way to take advantage of foam's pre-wash is to spray it onto your vehicle with foam gun connected to a pressure washer.



Coolant Concentrate 10x

Ingredient	Proportion
CC 10X	1 KG
Water	9

Process For 10 liter Batch :

- Add **CC 10X** @ 1 lt,
- Add 9 lt water slowly and stir rigorously (at 150-200 RPM approx.) for 15 mins.
- Continue Same Proportion for Next Batch.



Coolant Liquid Helps in Maintaining Optimum Fuel Economy. Antifreeze/coolant is responsible for maintaining the life of your Vehicle's engine.





SWADESH INTERNATIONAL

Reg. Office: H/1, Sumel-7, Soni Ni Chawl, Rakhial, Ahmedabad.

Factory: Plot No: 7, Shri Hari Ind. Estate, Kadadara Village, Gandhinagar.

Email : business.swadesh@gmail.com, swadeshinternational9@gmail.com

Web : www.swadeshinternational.com

Mo : +91 9904746569/ 6356989219/ 6359119541/ 9913135564/ 7859969199